

# LAVAMAT LN 89480 A3 - LN 89680 A3

User manual

Washing machine

Thank you for choosing one of our high-quality products.

To ensure optimal and regular performance of your appliance please read this instruction manual carefully. It will enable you to navigate all processes perfectly and most efficiently. To refer to this manual any time you need to, we recommend you to keep it in a safe place. And please pass it to any future owner of the appliance.

We wish you much joy with your new appliance.

## CONTENTS

<b>OPERATING INSTRUCTIONS</b>	3	Select the spin speed, Night Cycle or Rinse	
<b>SAFETY INFORMATION</b>	3	Hold option (button 3)	13
General safety	3	Programme options (button 4)	13
Installation	4	PREWASH	14
Use	4	STAIN	14
Child Safety	5	SENSITIVE	14
<b>PRODUCT DESCRIPTION</b>	5	EXTRA RINSE	14
Detergent dispenser drawer	7	Select the saving memory option (SAVE MEMORY)	14
<b>CONTROL PANEL</b>	7	Select the Child Lock option (CHILD LOCK )	15
<b>DISPLAY</b>	8	Select the TIME option (button 6) (TIME )	15
The display shows the following information:	8	Select the START/PAUSE (button 7) (START/ PAUSE )	16
Duration of the selected programme	8	Select the DELAY START (button 8) (DELAY START )	16
Programme progress display	8	Altering an option or a running programme	16
Delay start	9	Interrupting a programme	16
Incorrect option selection	9	Cancelling a programme	16
Alarm codes	9	Opening the door after the programme has started	16
End of the programme	9	At the end of the programme	17
<b>FIRST USE</b>	9	<b>WASHING PROGRAMMES</b>	18
Setting the language	9	<b>HELPFUL HINTS AND TIPS</b>	22
Setting the time	10	Sorting out the laundry	22
<b>PERSONALIZATION</b>	10	Temperatures	22
Setting the brightness	10	Before loading the laundry	22
Setting the contrast	10	Maximum loads	22
Setting the acoustic signal	10	Laundry weights	22
Return to main menu	11	Removing stains	23
<b>DAILY USE</b>	11	Detergents and additives	23
Open the door	11	Degrees of water hardness	24
Select the required programme by means of selector dial (1)	11	<b>CARE AND CLEANING</b>	24
Weight sensor	11	Descaling	24
Load the laundry	12	After each wash	24
Measure out the detergent and the fabric softener	12	Maintenance wash	24
Select the temperature (button 2)	13		

External cleaning	25	INSTALLATION INSTRUCTIONS	34
Detergent dispenser drawer	25	INSTALLATION	34
Washing drum	25	Unpacking	34
Door seal	26	Positioning and levelling	36
Drain pump	26	Water inlet	36
Cleaning the water inlet filters	28	Water-stop device	38
Frost precautions	29	Water drainage	38
Emergency emptying out	29	ELECTRICAL CONNECTION	39
WHAT TO DO IF...	29	ENVIRONMENT CONCERNS	39
TECHNICAL DATA	33	Packaging materials	40
CONSUMPTION VALUES	33	Ecological hints	40

Subject to change without notice

# OPERATING INSTRUCTIONS



## SAFETY INFORMATION



Read carefully & keep for future reference.

- The safety of Your appliance complies with the industry standards and with legal requirements on the safety of appliances. However, as manufacturers, we feel it is our duty to provide the following safety notes.
- It is most important that this instruction book should be retained with the appliance for future reference. Should the appliance be sold or transferred to another owner, or should you move house and leave the appliance, always ensure that the book is supplied with the appliance in order that the new owner can get to know the functioning of the appliance and the relevant warnings.
- You **MUST** read them carefully before installing or using the appliance.
- Before first starting up, check the appliance for any damage incurred during transport. Never connect up a damaged appliance . If parts are damaged, contact your supplier.
- If the appliance is delivered in the winter months when there are minus temperatures. Store it at room temperature for 24 hours before using for the first time.

## General safety

- It is dangerous to alter the specifications or attempt to modify this product in any way.
- During high temperature wash programmes the door glass may get hot. Do not touch it!
- Make sure that small pets do not climb into the drum. To avoid this, please check into the drum before using.
- Any objects such as coins, safety pins, nails, screws, stones or any other hard, sharp material can cause extensive damage and must not be placed into the machine.
- Only use the advised quantities of fabric softener and detergent. Damage to the fabric can ensue if you over-fill. Refer to the manufacturer's recommendations of quantities.

- Wash small items such as socks, laces, washable belts etc in a washing bag or pillow case as it is possible for such items to slip down between the tub and the inner drum.
- Do not use your appliance to wash articles with whalebones, material without hems or torn material.
- Always unplug the appliance and turn off the water supply after use, cleaning and maintenance.
- This appliance is provided with a white drum light. It is class 1, in accordance with IEC 60825-1:1993 + A1:1997 + A2:2001 standard. Should the appliance drum light need to be replaced, this must be carried out by a Service Centre.
- Under no circumstances should you attempt to repair the appliance yourself. Repairs carried out by inexperienced people may cause injury or serious malfunctioning. Contact your local Service Centre. Always insist on genuine spare parts.

## Installation

- This appliance is heavy. Care should be taken when moving it.
- When unpacking the appliance, check that it is not damaged. If in doubt, do not use it and contact the Service Centre.
- All packing and transit bolts must be removed before use. Serious damage can occur to the product and to property if this is not adhered to. See relevant section in the user manual.
- After having installed the appliance, check that it is not standing on the inlet and drain hose and the worktop is not pressing the electrical supply cable against the wall.
- If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely under the appliance.
- Always be sure, that there is no water leakage from hoses and their connections after the installation.
- If the appliance is installed in a location subject to frost, please read the "dangers of freezing" chapter.
- Any plumbing work required to install this appliance should be carried out by a qualified plumber or competent person.
- Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.


## Use

- This appliance is designed for domestic use. It must not be used for purposes other than those for which it was designed.
- Only wash fabrics which are designed to be machine washed. Follow the instructions on each garment label.
- Do not overload the appliance. See the Washing Programme Table.
- Before washing, ensure that all pockets are empty and buttons and zips are fastened. Avoid washing frayed or torn articles and treat stains such as paint, ink, rust, and grass before washing. Underwired bras must NOT be machine washed.
- Garments which have been in contact with volatile petroleum products should not be machine washed. If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine.
- Never pull the power supply cable to remove the plug from the socket; always take hold of the plug itself.

- Never use the appliance if the power supply cable, the control panel, the working surface or the base are damaged so that the inside of the washing machine is accessible.


## Child Safety

- This appliance is not intended for use by person (including children) with reduced physical sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The packaging components (e.g. plastic film, polystyrene) can be dangerous to children – danger of suffocation! Keep them out of children's reach.
- Keep all detergents in a safe place out of children's reach.
- Make sure that children or pets do not climb inside the drum. To prevent children or pets becoming trapped inside the drum the machine incorporates a special feature. To activate this device, rotate the button (without pressing it) inside the door clockwise until the groove is horizontal. If necessary use a coin. To disable this device and restore the possibility of closing the door, rotate the button anticlockwise until the groove is vertical.

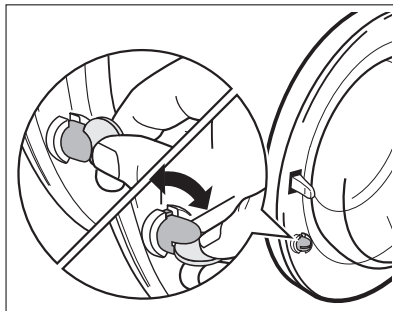


## PRODUCT DESCRIPTION


Your new appliance meets all modern requirements for effective treatment of laundry with low water, energy and detergent consumption. The NEW JET system allows total use of detergent and reduces water consumption so saving energy.

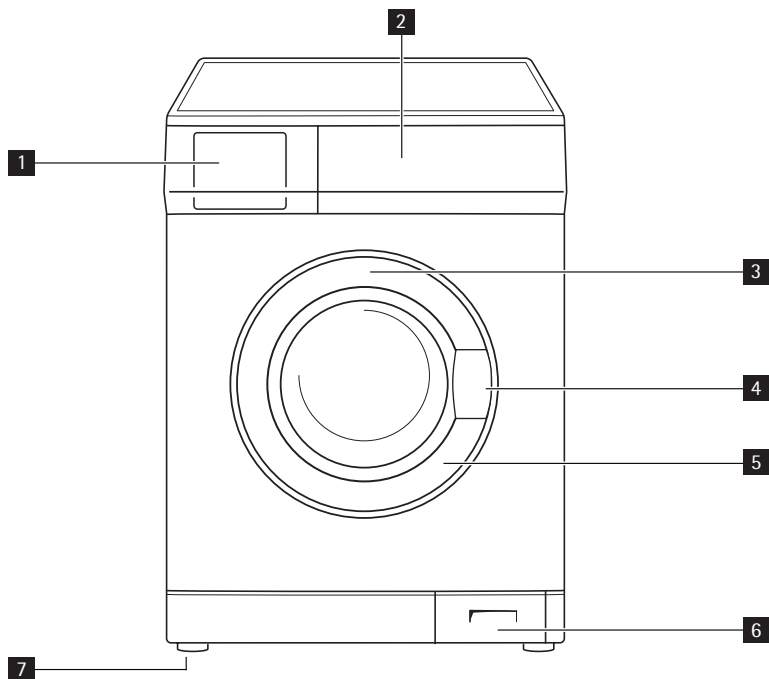



- 1 Detergent dispenser drawer
- 2 Control panel
- 3 Drum light
- 4 Door opening handle
- 5 Rating plate
- 6 Drain pump
- 7 Adjustable feet


## Detergent dispenser drawer

 Compartment for detergent used for **pre-wash**. The prewash detergent is added at the beginning of the wash programme.


 Compartment for powder or liquid detergent used for **main wash**.


 Compartment for **liquid additives** (fabric softener, starch).

 Compartment for stain remover used for main wash with **STAIN-option**.

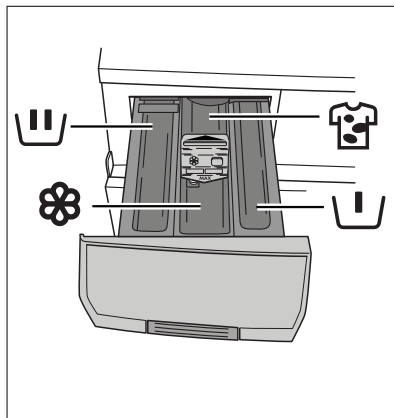

## CONTROL PANEL


 Below is a picture of the control panel. It shows the programme selector dial as well as the buttons and the display. These are presented by relevant numbers on the following pages.

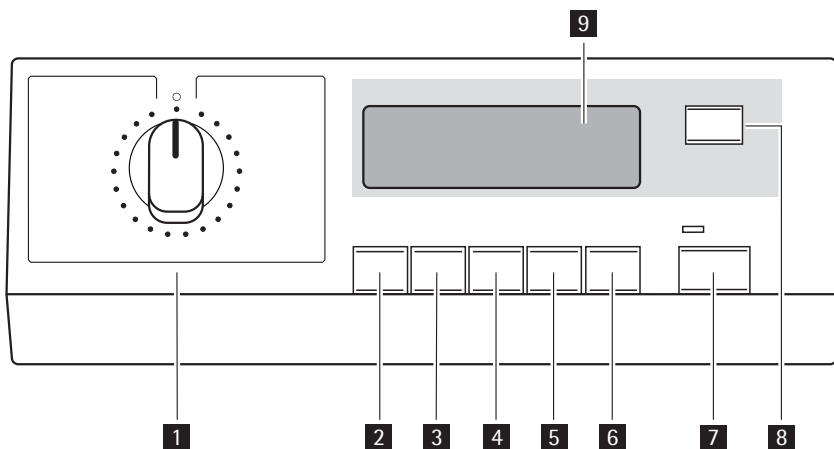

 

 





- 1** Programme selector dial
- 2** TEMPERATURE button (TEMP.)
- 3** SPIN reduction button (CENTRIF.)
- 4** OPTION button (TILVALG)
- 5** OK button (OK)
- 6** TIME SAVING button (TID)

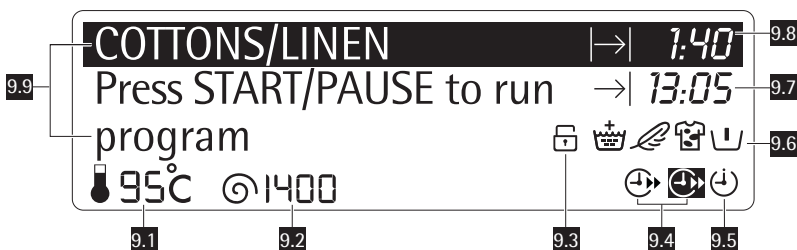- 7 START/PAUSE button (START/PAUSE)
- 8 DELAY START button (UDSKUDT START)
- 9 Display

## DISPLAY



- 9.1 - This position shows the water temperature of the washing cycle
- 9.2 - This position shows the selected spin speed and the following options symbols: NIGHT CYCLE , RINSE HOLD 
- 9.3 - CHILD SAFETY LOCK symbol ( CHILD LOCK )
- 9.4 - TIME SAVING options: ,  ( SUPER QUICK )
- 9.5 - The symbol of the delayed start ( DELAY START )
- 9.6 - Option symbols: PREWASH , STAIN , SENSITIVE , EXTRA RINSE 
- 9.7 - End of the programme
- 9.8 - Washing programme duration or delayed start countdown
- 9.9 - Information field (several rows show you the programme progress)

The display shows the following information:

### Duration of the selected programme

After selecting a programme, the duration of the washing programme **9.8** and the estimated end of cycle **9.7** are displayed in hours and minutes (for example 1.40). The duration is calculated automatically on the basis of the maximum recommended load for each type of fabric. After the programme has started, the time remaining is updated every minute.

### Programme progress display

After having pressed the button **7**, the display shows the running phase of the washing program **9.9**. On the display you can see also the description of the selected type of fabric, an animated bar, that indicates the carried out cycle and the remaining one, the duration of the washing program and the end of cycle.



## Delay start

If you have selected the button **8**, the relevant symbol **9.5** appears on the display. After having pressed the button **7**, the selected delay time value (max 20 hours) appears on the right side of the display with the corresponding symbol. The delay time value decreases every minute (**9.8**).

## Incorrect option selection

If a wrong option is selected the display says that it is not selectable.

## Alarm codes

In the event of operating problems, some alarm messages can be displayed, for example: « Cannot fill water. Please check that the tap is open and then press STAR/PAUSE » (see chapter «What to do if...»).

## End of the programme

When the programme has finished the corresponding message appears on the display. The button **7** pilot light goes off.

If your laundry is not removed during 10 minutes after the programme is finished, the backlight of the display switches off and the energy saving system will be enabled.

Only the button **7** pilot light is blinking to indicate that the appliance has to be switched off.

By pressing any button the appliance will come out from the energy saving status and you could set another washing programme or switch the appliance off.

## FIRST USE



- Ensure that the electrical and water connections comply with the installation instructions.
- Remove the polystyrene block and any material from the drum.
- Before the first wash, run a cotton cycle at the highest temperature without any laundry in the machine, to remove any manufacturing residue from the drum and tub. Pour 1/2 a measure of detergent into the main wash compartment and start the machine.

## Setting the language

When switching on the appliance for the first time, by turning the programme selector dial **1**, you must set the language that you prefer. When the appliance is switched on again all the messages in the display will appear in this language.



If the display is not showing any language screen, the appliance has already been switched on once. In such case, if you would change the language setting, press at the same time the buttons **2** and **3** for 6 seconds to activate the menu language.

By pressing the button **4** you can scroll all the available languages.

The display says to press the button **5** to confirm the language and then the button **4** to change the selection.

Press the button **5** twice to confirm your choice.

## Setting the time

After the desired language you must set the time before the first wash. Remember to change the setting time in accordance with daylight-savings time or solar time.

The CLOCK setting permits you to modify/set up the current time. It is important to keep it updated as the current END Cycle Time depends on it.

To set the time press repeatedly the button **4** to select the settings menu ( SETTINGS ) and confirm your choice by pressing button **5**.

With a single and short pressing of the button **4**, the hours can be adjusted.

Press the button **5** to confirm it. Repeat the previous operation for setting the minutes.



If the appliance has already been switched on once, refer to the beginning of «Personalization» chapter.

## PERSONALIZATION

This appliance is provided with a settings menu that allows you to modify the factory settings as you want.

When you switch on the machine, by turning the programme selector dial, press the button **4** to activate the options menu. By pressing again the same button you can move through all the available options till when you locate the settings menu. Press the button **5** to access in the menu. Use the button **4** again to scroll all the settings and press button **5** to confirm your choice.

### Setting the brightness

The brightness setting ( BRIGHTNESS ) allows you to modify the backlight intensity of the display.

By pressing the button **4**, you can increase or decrease the brightness.

You can choose between different levels from 0 to 9 (0 = min. - 9 = max.).

Press button **5** to confirm your choice.

### Setting the contrast

The contrast setting ( CONTRAST ) allows you to modify the optical characteristic of the display.

By pressing the button **4** you can increase or decrease the contrast.

You can choose between different levels from 0 to 9 (0 = min. - 9 = max.).

Press button **5** to confirm your choice.

### Setting the acoustic signal

The machine is provided with an acoustic device, which sounds in the following cases:

- at the end of the programme
- in the event of operating problems

If you wish to activate the acoustic device, press the button **4** in order to select the buzzer menu ( BUZZER ). Press button **5** to confirm your choice. The line around the corresponding symbol starts blinking in order to indicate that the regulation can be carried out.

Press again the button **4** to activate or deactivate the acoustic signal.

Then press the button **5** to confirm your choice.

## Return to main menu

This setting function allows you to return to the option menu.  
Locate the back option ( Back ) by pressing the button **4** .  
Press the button **5** to confirm your choice.

## DAILY USE



The appliance is provided with a weight sensor that permits to measure the quantity of laundry loaded into the drum and advises you on the detergent quantity to use. Before switching the appliance on, make sure that the drum is empty. If you do not, the washing will subsequently not be registered properly by the weight sensor. See chapter «Weight sensor».

## Open the door

Open the door by carefully pulling the door handle outwards.

## Select the required programme by means of selector dial (1)

The machine is switched on now.


You can choose the right programme for any type of laundry following the descriptions on the washing programme tables (see «Washing Programmes»).

Turn the programme selector dial to the required programme. The programme selector determines the type of washing cycle (e.g. water level, drum movement, number of rinses) and the washing temperature according to the type of laundry.

The pilot light of the button **7** starts blinking and the display shows the programme name and the duration of the selected programme.

The selector dial can be turned either clockwise or anticlockwise.

Position  to Switching OFF of the machine.

**At the end of the programme the selector dial must be turned to position  , to switch the machine off.**



### CAUTION!

If you turn the programme selector dial to another programme when the appliance is working, the display says to turn programme selector in the last used position.


To change a running programme please refer to «Altering an option or a running programme».

## Weight sensor

After some seconds you switched the appliance on the following indicators appear on the display if the door is open:

- the maximum load capacity of the selected programme, (i.e. 8 KG for Cottons; see «Washing Programmes» for the maximum load of each programme),
- the actual loading from **0.0 KG** to the maximum load provided for the selected washing programme. Loads of less than **0.5 KG** are not displayed,
- the animated bar that also fills itself with steps corresponding to 0.5 KG ,
- the detergent quantity recommended for current load expressed as a percentage.

If too much laundry has been loaded into the machine, the display will advise you about overloading. Remove the exceeding amount of laundry in such cases. Press any button or close the door to let the display show again the information about the washing programme.

 If settings are not undertaken for several seconds during the programme setting process, the loading information appears on the display when the door is open.

 The weight and the detergent quantity displayed for each programme are indicative and permit to reduce the detergent consumption.

The indicating weight screen won't appear any more when the door is closed and after the button **7** has been pressed to start the washing programme.


## Load the laundry

1. Place the laundry in the drum, one item at a time, shaking them out as much as possible.
2. Close firmly the door. You must hear a click during closing.





### **WARNING!**

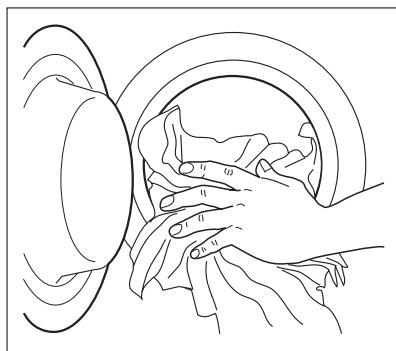
Do not embed the laundry between the door and the rubber joint.





## Measure out the detergent and the fabric softener

Your new appliance was designed to reduce water, energy and detergent consumption.


1. Pull out the dispenser drawer until it stops. Measure out the amount of detergent required, pour it into the main wash compartment  and, if you wish to carry out the **prewash** phase, pour the detergent into the compartment marked .

If you wish to perform the **stain** function, pour the stain remover into the compartment  marked with an arrow.

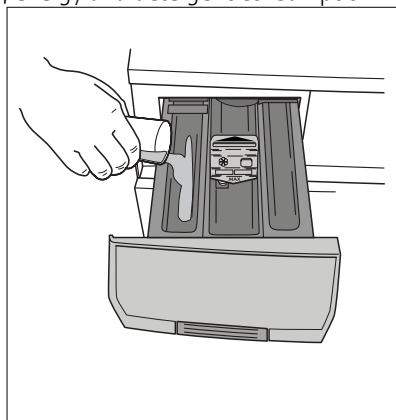

2. If required, pour fabric softener into the compartment marked  (the amount used must not exceed the **MAX** mark in the drawer).

Close the drawer gently.

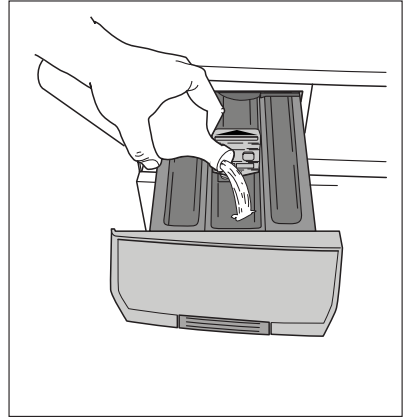

## Select the temperature (button 2)

Press this button repeatedly to increase or decrease the temperature, if you want your laundry to be washed at a temperature different from the one proposed by the appliance. The maximum temperatures for each washing programme can be checked in the paragraph «Washing programmes».

The symbol of cold wash corresponds to .

## Select the spin speed, Night Cycle or Rinse Hold option (button 3)

When the required programme has been selected, your appliance automatically proposes the maximum spin speed provided for that programme.

Press this button repeatedly to change the spin speed, if you want your laundry to be spun at a speed different from the one proposed by the appliance.

**RINSE HOLD** : by selecting this option the water of the last rinse is not emptied out to prevent the fabrics from creasing.

**NIGHT CYCLE** : by selecting this option, the machine will not drain the water of the last rinse, so as not to wrinkle the laundry. As all spinning phases are suppressed, this washing cycle is very noiseless and it can be selected at night or in times with a more economical power rate. On some programmes the rinses will be performed with more water.

**To empty out the water, please read «At the end of the programme» section in this chapter.**



For the compatibility between options and washing programmes consult the chapter «Washing programmes».

## Programme options (button 4)

Depending on the programme, different functions can be combined.



Not all the options are compatible with themselves. The symbols and messages of the incompatible options are not displayed.

Anyway, if an option, which is not compatible with the set washing programme or any other option, is selected, the display says that is not selectable.

You must select the options after you have selected the programme but before pressing the button **7**. Press the button **4** to activate the option menu.

To scroll all the available options, press the button **4**. The corresponding programme name appears in the relative rectangle to indicate that this programme can be selected.

Press the button **4** to activate and confirm your choice. The corresponding symbol appears on the right side of the display to indicate that this option has been set. Press the same button to deactivate the option.

After selecting the options, wait about 10 seconds until the display gets back to the default status. The selected options appear on the display.



For the compatibility between this option and washing programmes consult the chapter «Washing programmes».

## PREWASH

Select this option if you wish your laundry to be prewashed at 30°C before the main wash. The prewash phase ends with a short spin in programmes for cotton and synthetic fabrics, whereas in the programmes for delicate fabrics the water is only drained.


The relevant symbol will appear on the display.

This option is recommended for heavily soiled laundry.

## STAIN

Select this option to treat heavily soiled or stained laundry with stain remover (extended main wash with time optimized stain action phase). The relevant symbol will appear on the display.

This option **is not** available with a temperature lower than 40°C.

If you wish to perform a programme with the stain option, pour stain remover into stain compartment .

## SENSITIVE

By selecting this option the washing intensity will be reduced. The machine adds one rinse in the programmes for cottons and synthetics. The relevant symbol will appear on the display.

This option cannot be selected together with Extra Rinse option.

This option is recommended for non fast coloured items and for frequently washed items.

## EXTRA RINSE

This appliance is designed for saving water. However, for people with a very delicate skin (allergic to detergents) it may be necessary to rinse the laundry using an extra quantity of water.

The relevant symbol will appear on the display.

## Select the saving memory option ( SAVE MEMORY )

Programme settings that are frequently used can be saved (e.g. cotton, 60°C, 1600 rpm, with PREWASH and EXTRA RINSE ).

There are 2 memory spaces available for this purpose in the last 2 positions of the programme selector dial. The saved programme can be selected in the same way as any other wash programme by means of the selector dial.

Saving Memory:

- select the desired programme and required options
- press the button **4** to activate the options menu
- by pressing the button **4** , locate the saving memory option and press button **5**
- by pressing the button **4** select the number of the memory ( MEMORY ) (1-2) in which you wish memorize your customized programme.
- press the button **5** to save the selected programme. The display says that the programme has been saved.

To change the memorized programme setting repeat the procedure from the beginning.



If the memory space is already used by a programme previously selected, the display says that the memory is full and to press the button **5** to over-write or the button **4** to cancel. Press then button **5** to memorize the new programme.

The memorized programmes cannot be erased, but you can only over-write them with another washing programme setting.

## Select the Child Lock option ( CHILD LOCK )

Your appliance is provided with **CHILD SAFETY LOCK** , which permits you to leave the appliance unattended and not to worry that children might be injured by or cause damage to the appliance . Set this option before pressing the button **7** and after having selected the required programme wash.

This function remains able also when the appliance is not working.

### Setting Child lock option:

- press the button **4** to activate the options menu,
- press the button **4** to locate the **CHILD LOCK** option,
- press the button **5** to enable this option. The corresponding symbol appears on the display. The display says to press the button **4** and **5** together for 5 seconds to unlock the appliance.

If you press any button after the programme has started with **CHILD LOCK** enabled, the display will say that the appliance is locked and to use the key combination to unlock it.

At the end of the programme it is necessary to press simultaneously the button **4** and the button **5** for 5 seconds until the display will say that the appliance is unlocked.

This function stays permanently on. To disable it, refer to **Setting Child Lock option** .

## Select the TIME option (button 6) ( TIME )

The appliance proposes by default the washing cycle for normally soiled laundry. The washing cycle time can be reduced by means of this button.

This option can be selected with the washing programmes for COTTONS, SYNTHETICS and DELICATES.

By pressing this button once, the corresponding symbol and the message «**DAILY**» ( DAILY ) appear on the display and you will be able to reduce the cycle duration . The display will show the reduced washing time. To be used for lightly soiled laundry.

By pressing this button twice, the corresponding symbol and the message «**SUPER QUICK**» ( SUPER QUICK ) will appear on the display and you will be able to reduce the cycle duration. The display will show the reduced washing time.

To be used only for very lightly soiled laundry.

## Select the START/PAUSE (button 7) ( START/PAUSE )

Press this button, to start the selected programme. The corresponding red pilot light stops blinking.

On the display will appear the name and the running phase of the selected programme to indicate that the appliance starts operating and the door is locked.

To interrupt a programme which is running, press the button **7** : the corresponding red pilot light starts to flash, while the display says that the appliance is in pause.

To restart the programme from the point at which it was interrupted, press the button **7** again.

If you have chosen a delayed start, the machine will begin the countdown.

## Select the DELAY START (button 8) ( DELAY START )

This option makes it possible to delay the starting of the washing programme by 30, 60, 90 minutes, 2 hours and then by 1 hour till 20 hours.

Selecting the delay time:


- Select the programme and the required options,
- Select the desired delay time by pressing the button **8** , the display shows the delay value and the relevant symbol **9.5** .

The estimated end of the programme time is displayed in **9.7** .

- Press the button **7** : the machine starts its countdown displayed in **9.8** . The programme will start after the selected delay has expired.

You can cancel the delay time at any moment, before you press the button **7** .


Cancelling the delayed start:

- set the appliance to PAUSE by pressing the button **7** ,
- press the button **8** until the symbol  disappears on the display,
- press the button **7** again to start the programme.

The DELAY START option can not be selected with DRAIN or SPIN programmes.

## Altering an option or a running programme

It is possible to change some options before the programme carries them out. Before you make any change, you must pause the appliance by pressing the button **7** .

Changing a running programme is possible **only by resetting it** . Turn the programme selector dial to  and then to the new programme position. Press the button **5** to cancel the previous washing programme. Start the new programme by pressing the button **7** again. The washing water in the tub will be not emptied out.

## Interrupting a programme

Press the button **7** to interrupt a programme which is running, the corresponding light starts blinking. Press the same button again to restart the programme.

## Cancelling a programme

Turn the selector dial to  and then in the new selected programme.


Press the button **5** to cancel the programme which is running.

Now press the button **7** to start the new programme.

## Opening the door after the programme has started

First set the machine to Pause by pressing the button **7** .



- If the display says that the appliance is in pause, the door can be opened
- If the display says alternately that the appliance is in pause and the door is locked, this means that the machine is already heating, that the water level is above the bottom edge of the door or that the drum is turning: in this case the door can not be opened
- If you cannot open the door but you need to open it you have to switch the machine off by turning the selector dial to . After about some minutes the door can be opened (**pay attention to the water level and temperature!**) .


After closing the door, it is necessary to select the previous programme again and to press the button **7** , the machine will resume the programme from the point where it had been interrupted.


## At the end of the programme

The machine stops automatically. The pilot light of the button **7** goes off, a static **0.00** appears on the display and the acoustic signal sounds for some minutes.

If the RINSE HOLD or NIGHT CYCLE option has been selected, the pilot light of the button **7** goes off, the display says that the door is locked and the RINSE HOLD option has been selected, the door is blocked to indicate that the water must be emptied out.

Please **follow the below instructions** to empty out the water:





- turn the programme selector dial to  /OFF,
- select the DRAINING or SPINNING programme and confirm it by pressing button **5** ,
- reduce the spin speed if needed, by means of the relevant button,
- press the button **7** ,
- when the programme has finished the display shows a static **0.00** and the display says that the programme is finished. The door can be opened.






Turn the programme selector dial to  /OFF to switch the machine off. Remove the laundry from the drum and carefully check that the drum is empty.






If you do not intend to carry out another wash, close the water tap. Leave the door open to prevent the formation of mildew and unpleasant smells.





**Stand by** : once the programme has finished after a few minutes the energy saving system will be enabled. The brightness of the display is reduced. By pressing any button the appliance will come out of the energy saving status.

## WASHING PROGRAMMES

Programme Maximum and Minimum Temperature Cycle Description Maximum Fabrics Load Type of Laundry	Options	Detergent Compartment
<b>KOGE-/KULØRTVASK – KOKE-/KULØRTVASK</b> 95°- Cold Main wash - Rinses - Long spin Max. load 8 kg - Reduced load 4 kg <sup>1)</sup> Maximum spin speed at maximum spin speed <b>For white and coloured cotton</b> (normally soiled items).	SPIN REDUCTION - NIGHT CYCLE - RINSE HOLD - PREWASH <sup>2)</sup> - STAIN <sup>3)</sup> - EXTRA RINSE - SENSITIVE - TIME SAVING	
<b>HYGIENE</b> 60° Main wash - Rinses - Long spin Max. load 8 kg Maximum spin speed at maximum spin speed The washing programme for white cottons. This program eliminates the micro-organisms thanks to the washing by 60°C and an additional rinse. In this way the action is more effective. Put into the compartment Stain a special additive for hygiene and select the option Stain.	SPIN REDUCTION - RINSE HOLD - PRE- WASH <sup>2)</sup> - STAIN	
<b>40- 60 MIX</b> 40° Main wash - Rinses - Long spin Max. load 8 kg Maximum spin speed at maximum spin speed <b>White and coloured cotton</b> This programme can be used for laundry, which should be washed at 40°C or 60°C separately. The maximum load capacity can be put into the drum in order to save energy and water. The same good washing result will be obtained as for normal programme at 60°C.	SPIN REDUCTION - NIGHT CYCLE - RINSE HOLD - PREWASH <sup>2)</sup> - STAIN - SENSITIVE - EXTRA RINSE	
<b>JEANS</b> 60° - Cold Main wash - Rinses - Long spin Max. load 8 kg Maximum spin speed at 1200 rpm With this programme it is possible to wash items like pants, shirts or jackets in Jeans and also jersey realized with hi-tech materials. (The Extra Rinse option will be activated automatically).	SPIN REDUCTION - NIGHT CYCLE - RINSE HOLD - PREWASH <sup>2)</sup>	

Programme Maximum and Minimum Temperature Cycle Description Maximum Fabrics Load Type of Laundry	Options	Detergent Compartment
<b>SYNTETISK – SYNTET</b> 60°- Cold Main wash – Rinses – Short spin Max. load 4 kg – Reduced load 3 kg <sup>1)</sup> Maximum spin speed at 1200 rpm <b>Synthetic or mixed fabrics:</b> underwear, coloured garments, non-shrink shirts, blouses.	SPIN REDUCTION – NIGHT CYCLE – RINSE HOLD – PREWASH <sup>2)</sup> – STAIN <sup>3)</sup> – EXTRA RINSE – SENSITIVE – TIME SAVING <sup>1)</sup>	
<b>STRYGELET PLUS – STRYKELETT PLUS</b> 60°- Cold Main wash – Rinses – Short spin Max. load 4 kg Maximum spin speed at 1200 rpm <b>Synthetic fabrics to be gentle washed and spun.</b> Selecting this programme the laundry is gently washed and spun to avoid any creasing. In this way ironing is easier. Furthermore the machine will perform additional rinses.	SPIN REDUCTION – RINSE HOLD – PRE- WASH <sup>2)</sup> – EXTRA RINSE	
<b>FINVASK</b> 40°- Cold Main wash – Rinses – Short spin Max. load kg 4 – Reduced load kg 2 <sup>1)</sup> Maximum spin speed at 1200 rpm <b>Delicate fabrics:</b> acrylics, viscose, polyester.	SPIN REDUCTION – NIGHT CYCLE – RINSE HOLD – PREWASH <sup>2)</sup> – STAIN <sup>3)</sup> – EXTRA RINSE – TIME SAVING <sup>1)</sup>	
<b>TÆPPER – SENGEDEKKEN</b> 40°- 30° Main wash – Rinses – Short spin Max. load kg 3 Maximum spin speed at 800 rpm Special programme for a single synthetic blanket, duvet, bedspread and so on.	SPIN REDUCTION	
<b>SKÅNESKYL – SKÅNESKYLLING</b> Rinses – Short spin Max. load 4 kg Maximum spin speed at 1200 rpm With this programme it is possible to rinse and spin cotton garments which have been washed by hand. The machine performs some rinses, followed by a final spin.	SPIN REDUCTION – NIGHT CYCLE – RINSE HOLD – EXTRA RINSE	
<b>TØMNING – TØMMING</b> Draining of water For emptying out the water of the last rinse in programmes with the Rinse Hold option selected.		

Programme Maximum and Minimum Temperature Cycle Description Maximum Fabrics Load Type of Laundry	Options	Detergent Compartment
<b>CENTRIFUGERING – SENTRIFUGERING</b> Drain and long spin Max. load 8 kg Maximum spin speed at maximum spin speed Separate spin for hand washed cotton garments and after programmes with the Rinse Hold option selected. Before selecting this programme the selector dial must be turned to  . You can choose the spin speed by pressing the relevant button to adapt it to the fabrics to be spun.	SPIN REDUCTION	
<b>ULD PLUS – ULL PLUS – SILKE</b> 40° – Cold Main wash – Rinses – Short spin Max. load 2 kg; Max. load for silk: 1 kg Maximum spin speed at 1200 rpm Washing programme for machine washable wool as well as for hand washable woollens and delicate fabrics. <b>Note</b> : A single or bulky item may cause imbalance. If the appliance doesn't perform the final spin phase, add more items, redistribute the load manually and then select the spinning programme.	SPIN REDUCTION – NIGHT CYCLE – RINSE HOLD	
<b>LINGERIE</b> 40° – Cold Main wash – Rinses – Short spin Max. load 2 kg Maximum spin speed at 1200 rpm This programme is suitable for very delicate items, as lingerie, bras and underwear etc.	SPIN REDUCTION – NIGHT CYCLE – RINSE HOLD	
<b>SPORTSJAKKER</b> 40° – Cold Main wash – Rinses – Short spin Max. load 2,5 kg Maximum spin speed at 800 rpm Special program for sport clothes. By selecting this programme, do not add any additives.	SPIN REDUCTION / RINSE HOLD – EXTRA RINSE	
<b>20 MIN. – 3KG</b> 30° Main wash – Rinses – Short spin Max. load 3 kg Maximum spin speed at 1200 rpm This programme may be used for a quick washing of sport items or cotton and synthetic items, lightly soiled or worn once.	SPIN REDUCTION	

Programme Maximum and Minimum Temperature Cycle Description Maximum Fabrics Load Type of Laundry	Options	Detergent Compartment
<b>INTENSIV. KVIK – INTENSIV. KORT</b> 60° – 40° Main wash – Rinses – Short spin Max. load 5 kg Maximum spin speed at 1200 rpm Quick washing programme, to be used for lightly soiled white/fast coloured cottons and mixed fabrics.	SPIN REDUCTION / RINSE HOLD – EXTRA RINSE	
<b>SUPER ECO</b> Cold Main wash – Rinses – Short spin Max. load 3 kg Maximum spin speed at 1200 rpm <b>Mixed fabrics (cotton and synthetic).</b> Cold wash programme designed for saving energy, water and time. This programme is suitable with detergents that becomes effective at low temperature. The detergent must be used with the supplied or a suitable detergent dosing cap (use the amount of the detergent recommended by detergent's manufacturer). The appliance automatically runs a short heating phase if the water temperature is lower than 6° C only.	SPIN REDUCTION – RINSE HOLD , EXTRA RINSE	
<b>ENERGISPARE – ENERGISPARING</b> 60°–40° Main wash – Rinses – Long spin Max. load 8 kg Maximum spin speed at maximum spin speed <b>White and fast coloured cotton .</b> This programme can be selected for slightly or normally soiled cotton items. The temperature will decrease and the washing time will be extended. This allows to obtain a good washing efficiency so saving energy.	SPIN REDUCTION – NIGHT CYCLE – RINSE HOLD – PREWASH <sup>2)</sup> – STAIN – SENSITIVE – EXTRA RINSE	
 / OFF For cancelling the programme which is running or to switch the machine off .		

1) If you select the SUPER QUICK option by means of button TIME SAVING , we recommend you, to reduce the maximum load as indicated. Full loading possible however with somewhat reduced cleaning results.

2) If using liquid detergents, a programme without prewash must be selected.

3) Stain option can be selected only at the temperature of 40°C or higher.

## HELPFUL HINTS AND TIPS

### Sorting out the laundry

Follow the wash code symbols on each garment label and the manufacturer's washing instructions. Sort the laundry as follows: whites, coloureds, synthetics, delicates, woollens.

### Temperatures

<b>95° or 90°</b>	for normally soiled white cottons and linen (e.g. tea cloths, towels, tablecloths, sheets...)
<b>60°/50°</b>	for normally soiled, colour fast garments (e.g. shirts, night dresses, pyjamas...) in linen, cotton or synthetic fibres and for lightly soiled white cotton (e.g. underwear)
<b>40°-30°- Cold</b>	for delicate items (e.g. net curtains), mixed laundry including synthetic fibres and woollens bearing the label «pure new wool, machine washable, non-shrink»

### Before loading the laundry

Never wash whites and coloureds together. Whites may lose their «whiteness» in the wash. New coloured items may run in the first wash; they should therefore be washed separately the first time.

**Make sure that no metal objects are left in the laundry (e.g. hair clips, safety pins, pins).**

Button up pillowcases, close zip fasteners, hooks and poppers. Tie any belts or long tapes. Remove persistent stains before washing.

Rub particularly soiled areas with a special detergent or detergent paste.

Treat curtains with special care. Remove hooks or tie them up in a bag or net.

### Maximum loads

Recommended loads are indicated in the washing programme charts.

General rules:

- **Cotton, linen:** drum full but not too tightly packed;
- **Synthetics:** drum no more than half full;
- **Delicate fabrics and woollens:** drum no more than one third full.

Washing a maximum load makes the most efficient use of water and energy.

For heavily soiled laundry, reduce the load size.

### Laundry weights

The following weights are indicative:

The following weights are indicative:	
bathrobe	1200 g
quilt cover	700 g
man's work shirt	600 g
sheet, man's pyjamas	500 g
tablecloth	250 g

The following weights are indicative:

pillow case, towelling towel, night dress, man's shirt	200 g
tea cloth, ladies' briefs, napkin, blouse, men's underpants	100 g

## Removing stains

Stubborn stains may not be removed by just water and detergent. It is therefore advisable to treat them prior to washing.

**Blood:** treat fresh stains with cold water. For dried stains, soak overnight in water with a special detergent then rub in the soap and water.

**Oil based paint:** moisten with benzine stain remover, lay the garment on a soft cloth and dab the stain; treat several times.

**Dried grease stains:** moisten with turpentine, lay the garment on a soft surface and dab the stain with the fingertips and a cotton cloth.

**Rust:** oxalic acid dissolved in hot water or a rust removing product used cold. Be careful with rust stains which are not recent since the cellulose structure will already have been damaged and the fabric tends to hole.

**Mould stains:** treat with bleach, rinse well (whites and fast coloureds only).

**Grass:** soap lightly and treat with bleach (whites and fast coloureds only).

**Ball point pen and glue:** moisten with acetone<sup>1)</sup>, lay the garment on a soft cloth and dab the stain.

**Lipstick:** moisten with acetone as above, then treat stains with methylated spirits. Treat any residual marks with bleach.

**Red wine:** soak in water and detergent, rinse and treat with acetic or citric acid, then rinse. Treat any residual marks with bleach.

**Ink:** depending on the type of ink, moisten the fabric first with acetone<sup>1)</sup>, then with acetic acid; treat any residual marks on white fabrics with bleach and then rinse thoroughly.

**Tar stains:** first treat with stain remover, methylated spirits or benzine, then rub with detergent paste.

## Detergents and additives

Good washing results also depend on the choice of detergent and use of the correct quantities to avoid waste and protect the environment.

Although biodegradable, detergents contain substances which, in large quantities, can upset the delicate balance of nature.

The choice of detergent will depend on the type of fabric (delicates, woollens, cottons, etc.), the colour, washing temperature and degree of soiling.

All commonly available washing machine detergents may be used in this appliance:

- powder detergents for all types of fabric
- powder detergents for delicate fabrics (60°C max) and woollens
- liquid detergents, preferably for low temperature wash programmes (60°C max) for all types of fabric, or special for woollens only.

The detergent and any additives must be placed in the appropriate compartments of the dispenser drawer before starting the wash programme.

If using liquid detergents, a programme **without** prewash must be selected.

1) do not use acetone on artificial silk

Your appliance incorporates a recirculation system which allows an optimal use of the concentrated detergent.

Follow the product manufacturer's recommendations on quantities to use and do **not exceed the «MAX» mark in the detergent dispenser drawer**.

## Degrees of water hardness

Water hardness is classified in so-called "degrees" of hardness. Information on hardness of the water in your area can be obtained from the relevant water supply company, or from your local authority.



A water softener must be added when water has a medium-high degree of hardness (from degree of hardness II). Follow the manufacturer's instructions. The quantity of detergent can then always be adjusted to degree of hardness I (= soft).

Level	Characteristic	Degrees of water hardness	
		German °dH	French °T.H.
1	soft	0-7	0-15
2	medium	8-14	16-25
3	hard	15-21	26-37
4	very hard	> 21	> 37

## CARE AND CLEANING

You must **DISCONNECT** the appliance from the electricity supply, before you can carry out any cleaning or maintenance work.

### Descaling

The water we use normally contains lime. It is a good idea to periodically use a water softening powder in the machine. Do this separately from any laundry washing, and according to the softening powder manufacturer's instructions. This will help to prevent the formation of lime deposits.

### After each wash

Leave the door open for a while. This helps to prevent mould and stagnant smells forming inside the appliance. Keeping the door open after a wash will also help to preserve the door seal.

### Maintenance wash

With the use of low temperature washes it is possible to get a build up of residues inside the drum.

We recommend that a maintenance wash be performed on a regular basis.

To run a maintenance wash:

- The drum should be empty of laundry.
- Select the hottest cotton wash programme.
- Use a normal measure of detergent, must be a powder with biological properties.



## External cleaning

Clean the exterior cabinet of the appliance with soap and water only, and then dry thoroughly.




Do not use methylated spirits, solvents or similar products to clean the cabinet.


## Detergent dispenser drawer

The detergent dispenser drawer should be cleaned regularly.

1. Remove the detergent dispenser drawer by pulling it firmly.
2. Remove the conditioner insert from the middle compartment.
3. Clean all parts with water.
4. Put the conditioner insert in as far as it will go, so that it is firmly in place.

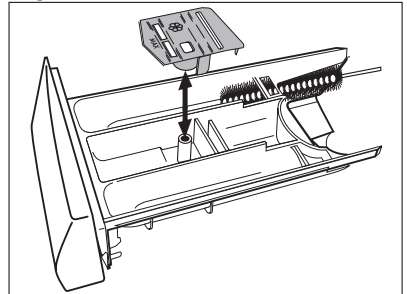

5. Clean all parts of the washing machine, especially the nozzles in the top of the washing-in chamber, with a brush.
6. Insert the detergent dispenser drawer in the guide rails and push it in.

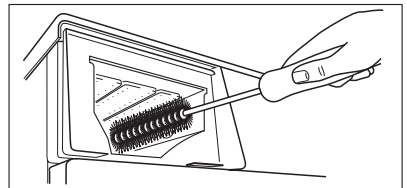

## Washing drum

Rust deposits in the drum may occur due to rusting foreign bodies in the washing or tap water containing iron.




Do not clean the drum with acidic descaling agents, scouring agents containing chlorine or iron or steel wool.

1. Remove any rust deposits on the drum with a cleaning agent for stainless steel.
2. Run a washing cycle without any washing to clean off any cleaning agent residues.

Programme: Short Cotton Programme at maximum temperature and add approx. 1/4 measuring cup of detergent.

## Door seal

Check from time to time the door seal and objects that could be trapped in the fold.

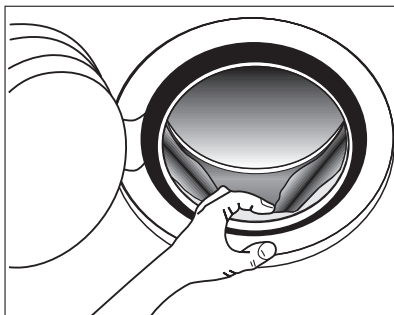

## Drain pump

The pump should be inspected regularly and particularly if:

- the appliance does not empty and/or spin;
- the appliance makes an unusual noise during draining due to objects such as safety pins, coins etc. blocking the pump;
- a problem with water draining is detected (see chapter "What to do if..." for more details).




### **WARNING!**


Before opening the pump door, switch the appliance off remove the mains plug from the socket.

Proceed as follows:

1. Unplug the appliance.
2. If necessary wait until the water has cooled down.
3. Open the pump door.
4. Pull flap forward to remove.
5. Place a container close to the pump to collect any spillage.

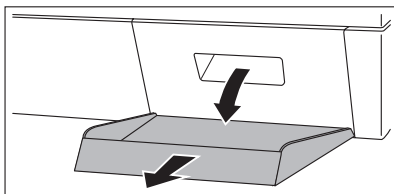

6. Pull out the emergency emptying hose, place it in the container and remove its cap.





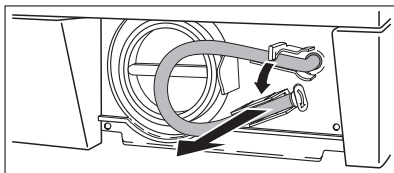


7. When no more water comes out, unscrew the pump cover by turning it anti-clockwise and remove the filter. Use pliers, if necessary. Always keep a rag nearby to dry up any water spillages when removing the cover.

Clean the filter under a tap, to remove any traces of fluff.

8. Remove foreign bodies and fluff from the filter seat and from the pump impeller.

9. Check carefully whether the pump impeller rotates (it rotates jerkily). If it doesn't rotate, please contact your Service Centre.
10. Put the cap back on the emergency emptying hose and place the latter back in its seat.
11. Replace the filter into the pump by inserting it correctly into the special guides. Screw the pump cover firmly by turning it clockwise.
12. Refit the flap and close the pump door.

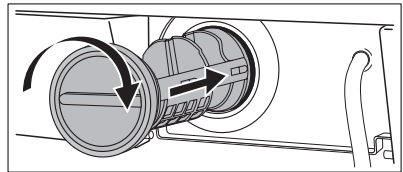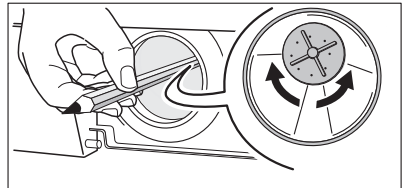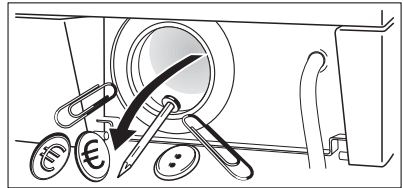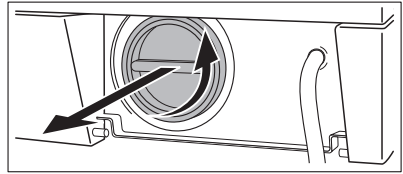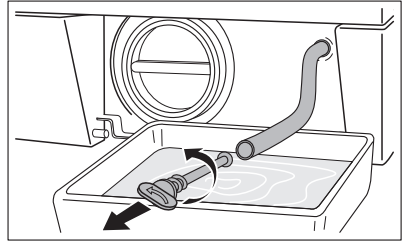

### **WARNING!**

When the appliance is in use and depending on the programme selected there can be hot water in the pump.

Never remove the pump cover during a wash cycle, always wait until the appliance has finished the cycle, and is empty. When refitting the pump cover, ensure it is securely re-tightened so as to stop leaks and young children being able to remove it.




## Cleaning the water inlet filters



If the appliance doesn't fill, it takes a long time to fill with water, the starting button blinks yellow or the display (if available) shows the relevant alarm (see chapter "What to do if..." for more details), check if the water inlet filters are blocked.

To clean the water inlet filters:

1. Turn off the water tap.
2. Unscrew the hose from the tap.
3. Clean the filter in the hose with a stiff brush.
4. Screw the hose back onto the tap. Make sure the connection is tight.
5. Unscrew the hose from the machine. Keep a towel nearby because some water may flow.
6. Clean the filter in the valve with a stiff brush or with the piece of cloth.
7. Screw the hose back to the machine and make sure the connection is tight.
8. Turn on the water tap.

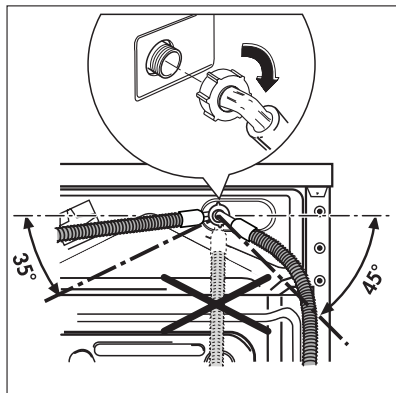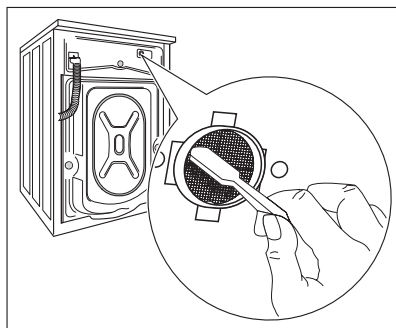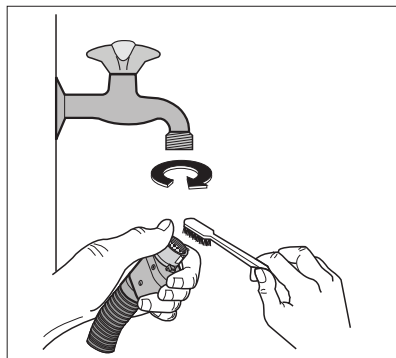

## Frost precautions

If the machine is installed in a place where the temperature could drop below 0°C, proceed as follows:

1. close the water tap and unscrew the water inlet hose from the tap;
2. place the end of the emergency emptying hose and that of the inlet hose in a bowl placed on the floor and let water drain out;
3. screw the water inlet hose back on and reposition the emergency emptying hose after having put the cap on again.

By doing this, any water remaining in the machine is removed, avoiding ice forming and consequently damage to the appliance.

When you use the machine again, make sure that the ambient temperature is above 0°C.

## Emergency emptying out

If the water is not discharged, proceed as follows to empty out the machine:

1. pull out the plug from the power socket;
2. close the water tap;
3. if necessary, wait until the water has cooled down;
4. open the pump door;
5. place a bowl on the floor and place the end of the emergency emptying hose into the bowl. Remove its cap. The water should drain by gravity into the bowl. When the bowl is full, put the cap back on the hose. Empty the bowl. Repeat the procedure until water stops flowing out;
6. clean the pump if necessary as previously described;
7. replace the emergency emptying hose in its seat after having plugged it;
8. screw the pump again and close the door.

## WHAT TO DO IF...

Certain problems are due to lack of simple maintenance or oversights, which can be solved easily without calling out an engineer. Before contacting your local Service Centre, please carry out the checks listed below.

During machine operation it is possible that the **yellow** pilot light of button **8** blinks, one of the following messages appear on the display and at the same time some acoustic signals sound every 20 seconds to indicate that the machine is not working:

- **Problem with the water supply:** « Cannot fill water. Please check that the tap is open and then press START/PAUSE ».
- **Problem with the water draining:** « Cannot drain the water. Please check that the filter is clean and then press START/PAUSE ».
- **Door open:** « Please check that the door is closed properly and then press START/PAUSE ».
- **Anti-flooding system has activated:** « Anti-flooding system has been activated. Please check inlet/drain pipe connections ».

Once the problem has been eliminated, press the button **8** to restart the programme. If after all checks, the problem persists, contact your local Service Centre.


Problem	Possible cause/Solution
The washing machine does not start:	<p>The door has not been closed. « <b>Please check that the door is closed properly and then press START/PAUSE »</b></p> <ul style="list-style-type: none"> <li>• Close the door firmly.</li> </ul> <p>The plug is not properly inserted in the power socket.</p> <ul style="list-style-type: none"> <li>• Insert the plug into the power socket.</li> </ul> <p>There is no power at the socket.</p> <ul style="list-style-type: none"> <li>• Please check your domestic electrical installation.</li> </ul> <p>The main fuse has blown.</p> <ul style="list-style-type: none"> <li>• Replace the fuse.</li> </ul> <p>The selector dial is not correctly positioned and the button <b>8</b> has not been pressed.</p> <ul style="list-style-type: none"> <li>• Please turn the selector dial and press the button <b>8</b> again.</li> </ul> <p>The delay start has been selected.</p> <ul style="list-style-type: none"> <li>• If the laundry is to be washed immediately, cancel the delay start.</li> </ul> <p>The Child safety lock has been activated.</p> <ul style="list-style-type: none"> <li>• Deactivate this device.</li> </ul>
The machine does not fill:	<p>The water tap is closed. « <b>Cannot fill water. Please check that the tap is open and then press button START/PAUSE »</b></p> <ul style="list-style-type: none"> <li>• Open the water tap.</li> </ul> <p>The inlet hose is squashed or kinked. « <b>Cannot fill water. Please check that the tap is open and then press button START/PAUSE »</b></p> <ul style="list-style-type: none"> <li>• Check the inlet hose connection.</li> </ul> <p>The filter in the inlet hose or the inlet valve filter are blocked.</p> <ul style="list-style-type: none"> <li>• Clean the water inlet filters. (See "Cleaning the water inlet filters" for more details)</li> </ul> <p>The door is not properly closed. « <b>Please check that the door is closed properly and then press START/PAUSE »</b></p> <ul style="list-style-type: none"> <li>• Close the door firmly.</li> </ul>
The machine fills then empties immediately:	<p>The end of the drain hose is too low.</p> <ul style="list-style-type: none"> <li>• Refer to relevant paragraph in «Water drainage» section.</li> </ul>

Problem	Possible cause/Solution
<p>The machine does not empty and/or does not spin:</p>	<p>The drain hose is squashed or kinked. « <b>Cannot drain the water. Please check that the filter is clean and then press button START/PAUSE »</b></p> <ul style="list-style-type: none"> <li>• Check the drain hose connection.</li> </ul> <p>The drain filter is clogged. « <b>Cannot drain the water. Please check that the filter is clean and then press button START/PAUSE »</b></p> <ul style="list-style-type: none"> <li>• Clean the drain filter.</li> </ul> <p>An option or a programme that ends with the water still in the tub or a that eliminates all the spinning phases has been selected.</p> <ul style="list-style-type: none"> <li>• Select the draining or the spinning programme.</li> </ul> <p>The laundry is not evenly distributed in the drum.</p> <ul style="list-style-type: none"> <li>• Redistribute the laundry.</li> </ul>
<p>There is water on the floor:</p>	<p>Too much detergent or unsuitable detergent (creates too much foam) has been used.</p> <ul style="list-style-type: none"> <li>• Reduce the detergent quantity or use another one.</li> </ul> <p>Check whether there are any leaks from one of the inlet hose fittings. It is not always easy to see this as the water runs down the hose; check to see if it is damp.</p> <ul style="list-style-type: none"> <li>• Check the water inlet hose connection.</li> </ul> <p>The drain or the inlet hose is damaged.</p> <ul style="list-style-type: none"> <li>• Replace it with a new one.</li> </ul> <p>The cap on the emergency emptying hose has not been replaced or the filter has not been properly screwed in after cleaning action.</p> <ul style="list-style-type: none"> <li>• Refit the cap on the emergency emptying hose or screw the filter fully in.</li> </ul>
<p>Unsatisfactory washing results:</p>	<p>Too little detergent or unsuitable detergent has been used.</p> <ul style="list-style-type: none"> <li>• Increase the detergent quantity or use another one.</li> </ul> <p>Stubborn stains have not been treated prior to washing.</p> <ul style="list-style-type: none"> <li>• Use commercial products to treat the stubborn stains.</li> </ul> <p>The correct temperature was not selected.</p> <ul style="list-style-type: none"> <li>• Check if you have selected the correct temperature.</li> </ul> <p>Excessive laundry load.</p> <ul style="list-style-type: none"> <li>• Reduce the laundry load.</li> </ul>

Problem	Possible cause/Solution
<b>The door will not open:</b>	<p>The programme is still running.</p> <ul style="list-style-type: none"> <li>• Wait the end of washing cycle.</li> </ul> <p>There is water in the drum.</p> <ul style="list-style-type: none"> <li>• Select drain or spin programme to empty out the water.</li> </ul> <p><b>For opening the door refer to display message.</b></p>
<b>The machine vibrates or is noisy:</b>	<p>The transit bolts and packing have not been removed.</p> <ul style="list-style-type: none"> <li>• Check the correct installation of the appliance.</li> </ul> <p>The support feet have not been adjusted</p> <ul style="list-style-type: none"> <li>• Check the correct levelling of the appliance.</li> </ul> <p>The laundry is not evenly distributed in the drum.</p> <ul style="list-style-type: none"> <li>• Redistribute the laundry.</li> </ul> <p>Maybe there is very little laundry in the drum.</p> <ul style="list-style-type: none"> <li>• Load more laundry.</li> </ul>
<b>Spinning starts late or the machine does not spin:</b>	<p>The electronic unbalance detection device has cut in because the laundry is not evenly distributed in the drum. The laundry is redistributed by reverse rotation of the drum. This may happen several times before the unbalance disappears and normal spinning can resume. If, after some minutes, the laundry is still not evenly distributed in the drum, the machine will not spin.</p> <ul style="list-style-type: none"> <li>• The laundry load is perhaps too little, add more items, redistribute the load manually and then select the spinning programme.</li> </ul>
<b>No water is visible in the drum:</b>	<p>Machines based on modern technology operate very economically using very little water without affecting performance.</p>
<b>The display shows the message « Anti-flooding system has been activated. Please check inlet/drain pipe connections » :</b>	<p>Anti-flooding system has been activated.</p> <ul style="list-style-type: none"> <li>• Disconnect the appliance, close the water tap and contact the Service Force Centre</li> </ul>
<b>The drum light doesn't work:</b>	<p>Please contact your local Service Centre.</p>



If you are unable to identify or solve the problem, contact our service centre. Before telephoning, make a note of the model, serial number and purchase date of your machine: the Service Centre will require this information.

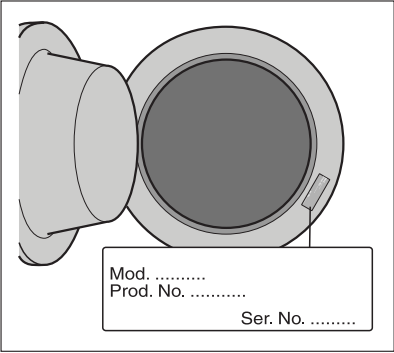

TECHNICAL DATA

Dimensions	Width Height Depth	60 cm 85 cm 63 cm
Electrical connection	Information on the electrical connection is given on the rating plate, on the inner edge of the appliance door.	
Water supply pressure	Minimum Maximum	0,05 MPa 0,8 MPa
Maximum Load	Cotton	8 kg
Spin Speed	Maximum	1400 rpm (LN 89480 A3) 1600 rpm (LN 89680 A3)

CONSUMPTION VALUES

Programme	Energy consumption (kWh)	Water consumption (litres)	Programme duration (Hours.Minutes)
White Cottons 95°	2,5	62	For the duration of the programmes, please refer to the display on the control panel.
Cottons 60°	1,7	63	
Cotton ECO 60° 1)	1,03	57	
Cottons 40°	0,97	62	
Synthetics 40°	0,55	51	
Delicates 40°	0,53	67	
Wool/ Handwash 30°	0,32	64	

1) « Cotton Eco » at 60°C with a load of 8 kg is the reference programme for the data entered in the energy label, in compliance with EEC 92/75 standards.

**i** The consumption data shown on this chart is to be considered purely indicative, as it may vary depending on the quantity and type of laundry, on the inlet water temperature and on the ambient temperature.


## INSTALLATION INSTRUCTIONS

### INSTALLATION


#### Unpacking

All transit bolts and packing must be removed before using the appliance. You are advised to keep all transit devices so that they can be refitted if the machine ever has to be transported again.


1. After removing all the packaging, carefully lay machine on its back to remove the polystyrene base from the bottom.

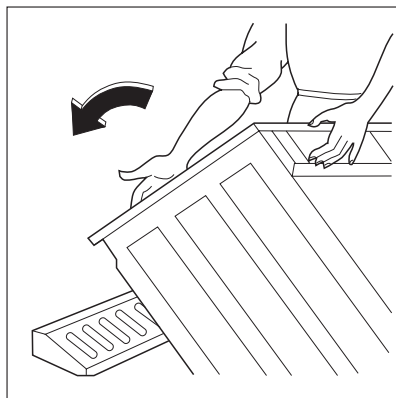


2. Remove the power supply cable and the draining hose from the hose holders on the rear of the appliance.

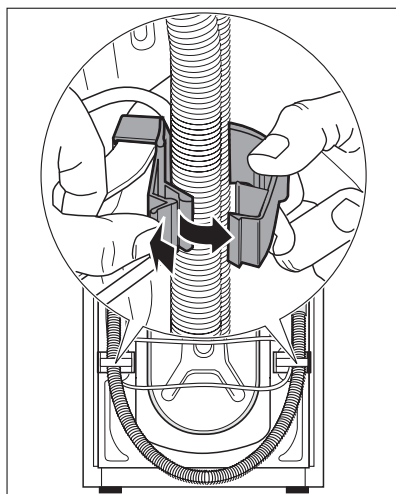


3. Unscrew the three bolts using the key supplied with the machine.

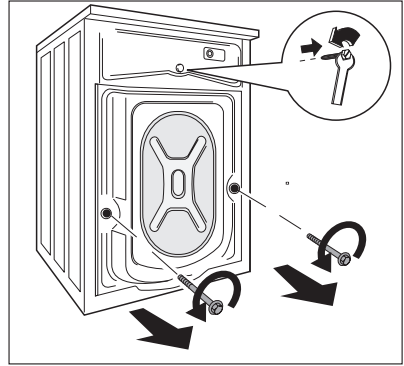


4. Slide out the relevant plastic spacers.

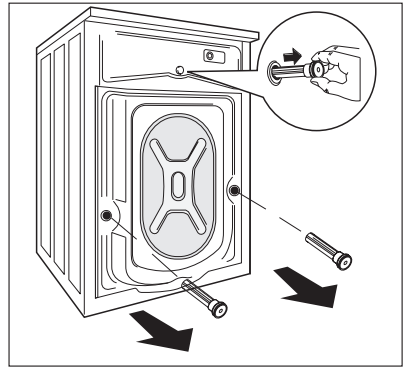

5. Open the porthole, take out the inlet hose from the drum and remove the polystyrene block fitted on the door seal.

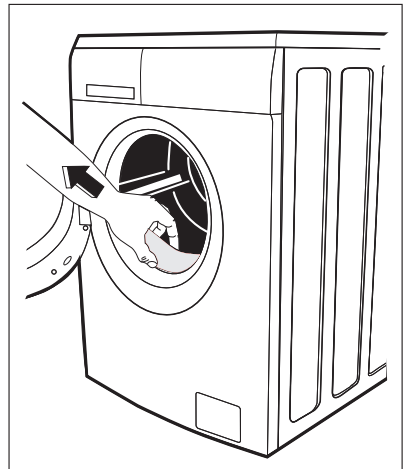

6. Fill the smaller upper hole and the two large ones with the corresponding plastic plug caps supplied in the bag containing the instruction booklet.
7. Connect the water inlet hose as described under the paragraph «Water inlet».

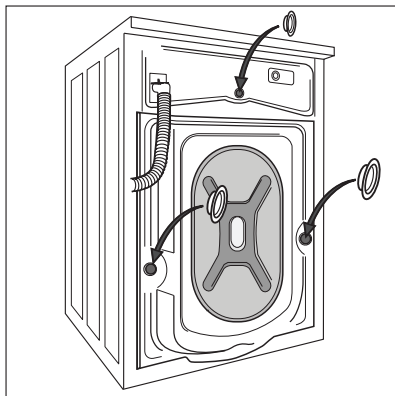


## Positioning and levelling

Install the machine on a flat hard floor. Make sure that air circulation around the machine is not impeded by carpets, rugs etc. Before placing it on small tiles, apply a rubber coating.

Never try to correct any unevenness in the floor by putting pieces of wood, cardboard or similar materials under the machine.

If it is impossible to avoid positioning the machine next to a gas cooker or coalburning stove, an insulating panel covered with aluminium foil on the side facing the cooker or stove, must be inserted between the two appliances.

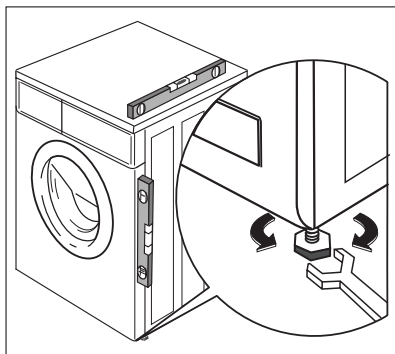

The machine must not be installed in rooms where the temperature can drop below 0°C. The water inlet hose and the drain hose must not be kinked.

Please ensure that when the appliance is installed, it is easily accessible for the engineer in the event of a breakdown.

Carefully level by screwing the adjustable feet in or out. Never place cardboard, wood or similar materials under the machine to compensate for any unevenness in the floor.

## Water inlet

An inlet hose is supplied and can be found inside the machine drum.


**This appliance must be connected to a cold water supply.**

**Do not use the hose from your previous machine to connect to the water supply.**

1. Open the porthole and extract the inlet hose.
2. Connect the hose with the angled connection to the machine.




**Do not place the inlet hose downwards. Angle the hose to the left or right depending on the position of your water tap.**

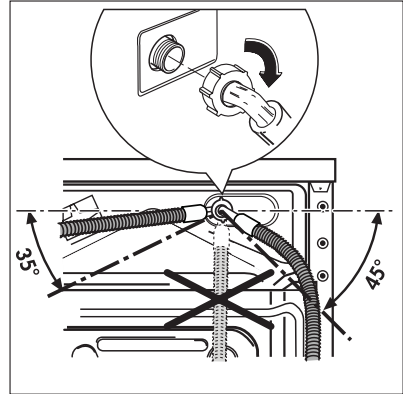


3. Set the hose correctly by loosening the ring nut. After positioning the inlet hose, be sure to tighten the ring nut again to prevent leaks.
4. Connect the hose to a tap with a 3/4" thread. Always use the hose supplied with the appliance.

The inlet hose must not be lengthened. If it is too short and you do not wish to move the tap, you will have to purchase a new, longer hose specially designed for this type of use. Installation should comply with local water authority and building regulations requirements. Check the minimum water pressure required for safe operation of the appliance in the chapter "Technical Data".

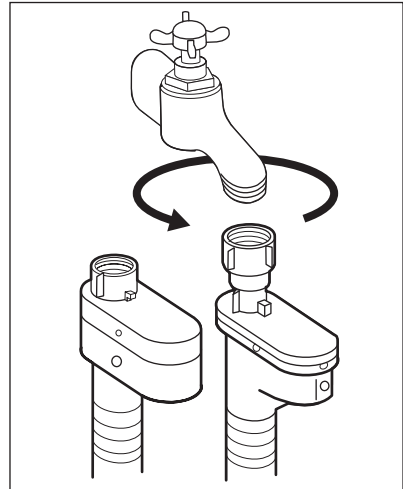

## Water-stop device

The inlet hose is provided with a water stop device, which protects against damage caused by water leaks in the hose which could develop due to natural ageing of the hose. This fault is shown by a red sector in the window «A». Should this occur, turn the water tap off and refer to your Service Centre to replace the hose.

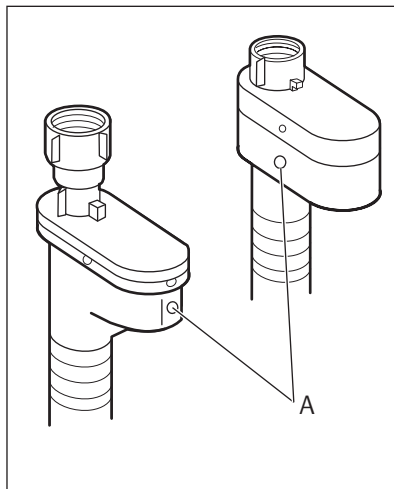

## Water drainage

The end of the drain hose can be positioned in three ways:

1. **Hooked over the edge of a sink using the plastic hose guide supplied with the machine.**


In this case, make sure the end cannot come unhooked when the machine is emptying.


This could be done by tying it to the tap with a piece of string or attaching it to the wall.

2. **In a sink drain pipe branch.** This branch must be above the trap so that the bend is at least 60 cm above the ground.
3. **Directly into a drain pipe at a height** of not less than 60 cm and not more than 90 cm.

The end of the drain hose must always be ventilated, i.e. the inside diameter of the drain pipe must be larger than the outside diameter of the drain hose.

The drain hose must not be kinked.

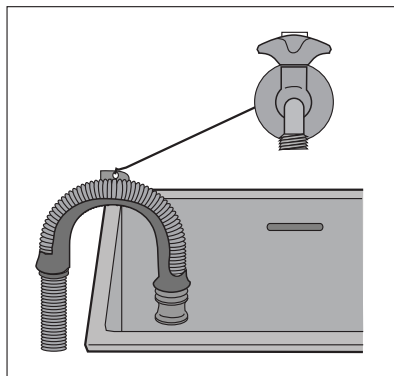

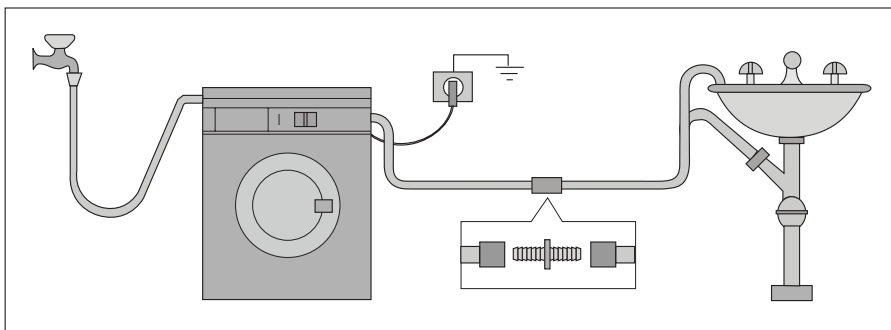

The drain hose may be extended to a maximum of 4 metres. An additional drain hose and joining piece is available from your local Service Centre.

## ELECTRICAL CONNECTION

Information on the electrical connection is given on the rating plate on the inner edge of the appliance door.

Check that your domestic electrical installation can take the maximum load required, also taking into account any other appliances in use.



### **WARNING!**

**Connect the machine to an earthed socket.**



### **WARNING!**

**The manufacturer does not accept any responsibility for damage or injury through failure to comply with the above safety precaution.**



### **WARNING!**


**The power supply cable must be easily accessible after installing the machine.**




### **WARNING!**

**Should the appliance power supply cable need to be replaced, this must be carried out by a Service Centre.**

## ENVIRONMENT CONCERNS

The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product.

## Packaging materials

The materials marked with the symbol  are recyclable.

>PE<=polyethylene

>PS<=polystyrene

>PP<=polypropylene

This means that they can be recycled by disposing of them properly in appropriate collection containers.

## Ecological hints

To save water, energy and to help protect the environment, we recommend that you follow these tips:

- Normally soiled laundry may be washed without prewashing in order to save detergent, water and time (the environment is protected too!).
- The machine works more economically if it is fully loaded.
- With adequate pre-treatment, stains and limited soiling can be removed; the laundry can then be washed at a lower temperature.
- Measure out detergent according to the water hardness, the degree of soiling and the quantity of laundry being washed.











[www.aeg-electrolux.com/shop](http://www.aeg-electrolux.com/shop)

